

(1) Touch the 10key display.

\*Randomly displayed

(2) Enter PIN code


(3) Touch E

\*If the PIN is correct, "YES" is displayed.


\*If the PIN is incorrect, "No" is displayed.

(4) While "YES" is displayed (within 8 seconds), open the door.


(1) Touch the 10key display

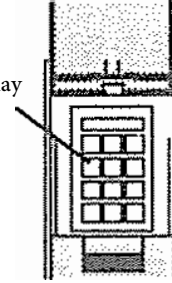



【PIN code 1234 case】

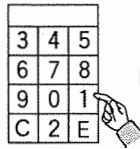

(2) Enter

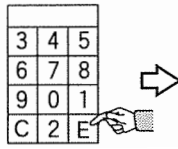

 (3) Touch

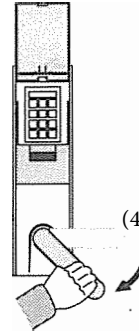

(4) Open the door